



AUTOPILOT™ QUICK START GUIDE

AutoPilot™

Company :	A.I.Pilot GmbH	Issue :	Revision R1
Location :	Hohenstein-Ernstthal, Germany	Date :	19-08-2019
Project Name :	-	Pages :	
Product Name:	AutoPilot™	Doc No:	AIP-QSG-001- ZIP_GW_EN.docx

© 2019 A.I.Pilot GmbH. All rights reserved. Under copyright laws, this document may not be copied, in whole or in part, without the written consent of A.I.Pilot GmbH.

Other company and product names mentioned herein are trademarks of their respective companies. Mention of third-party products is for informational purposes only.

AutoPilot™ - Quick Start Guide

1. Connect AutoPilot™ to your local network
2. Connect the 5V power supply and put the AutoPilot™ into operation
3. Navigate in your browser (Chrome, Firefox, Safari) to the following homepage:
<https://setup.aeotec.com> (Fig. 1)

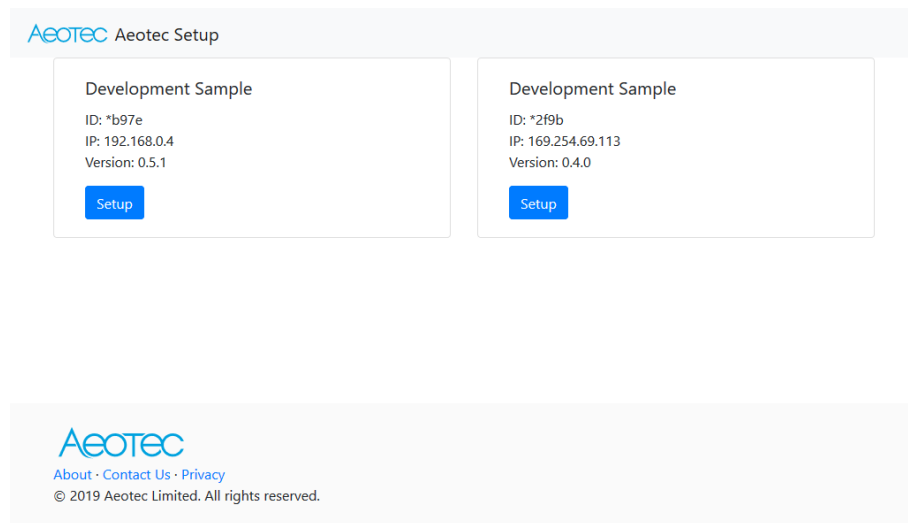


Fig. 1: Homepage: <https://setup.aeotec.com>

4. There you will find one of the following two possible variants. Continue with the corresponding instructions:
 - a. Only one AutoPilot™ was found in your local network:
→ You will be redirected to <https://id.aeotec.com> (Figs. 2 and 3)
 - b. Several AutoPilot™ Gateways were found in your local network:
→ From the list of available AutoPilot™ gateways, select the one you want to set up.
→ Click on **Setup** (Fig. 1)

If your AutoPilot™ is not yet visible, reload the page. If necessary, check the Ethernet connection and restart the device by disconnecting it from the power supply for a short time.

To register via the AEOTEC ID, the address <https://home.aeotec.com> can also be used as an alternative to <https://id.aeotec.com>.

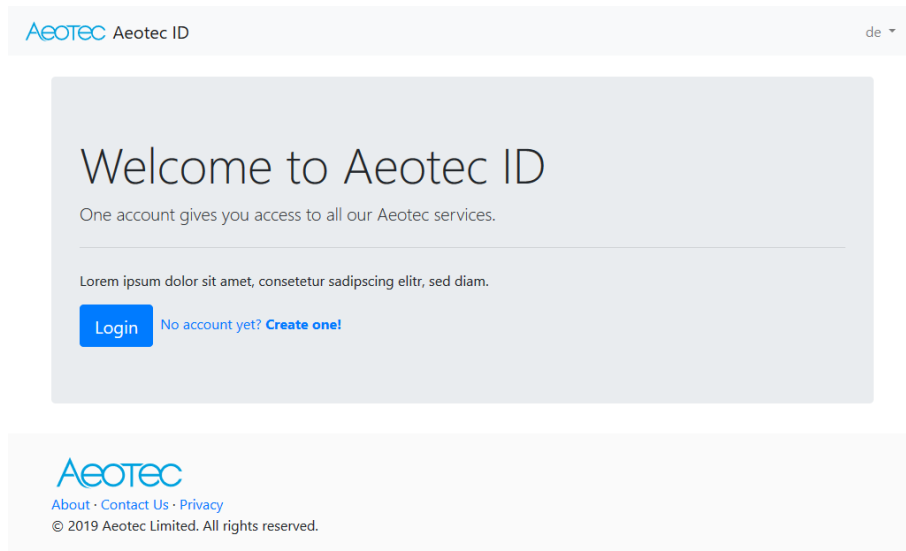


Fig. 2: Homepage: <https://id.aeotec.com>

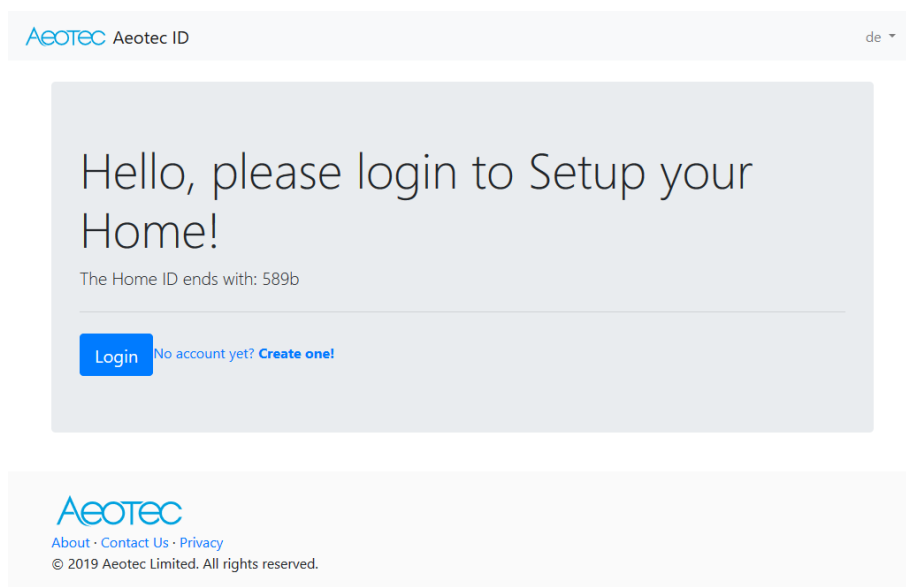



Fig. 3: Forwarding AutoPilot setup

5. Login to AEOTEC ID (Fig. 2) to connect the AutoPilot™ to your account

- a. You already have an Aeotec ID Account?
 - log in (Fig. 6)
 - Forwarding to the **Setup/Connect Dialog** (Fig. 7)
- b. You don't have an account yet?
 - Click on **No account yet? Create one!** (Fig. 2 and 3)
 - After the successful creation of a new Aeotec ID account (Fig. 4), an e-mail verification is performed (Fig. 5).
 - Forwarding to the **Setup/Connect Dialog** (Fig. 7)

 Aeotec ID
 de ▾

First name

Last name

E-Mail

Password

Password confirm

Register



[About](#) · [Contact Us](#) · [Privacy](#)

© 2019 Aeotec Limited. All rights reserved.

Fig.4: AEOTEC ID – create new account

Aeotec ID

Hello!

In order to use the application, please verify your email address.

Activate your account


Thank you for using our application!

Regards,
Aeotec ID

If you're having trouble clicking the "Activate your account" button, copy and paste the URL below into your web browser:
<https://id.aeotec.com/api/v1/auth/verify/6cd578cabd7d1b6cf131e9220e8c4c11513c13e22?expires=1564483669&signature=87206c62a692aed190c4c89f68c39bf5649d3ec7edd5950c3a6edd1bbca4edf5>

© 2019 Aeotec ID. All rights reserved.

Fig. 5: E-mail validation

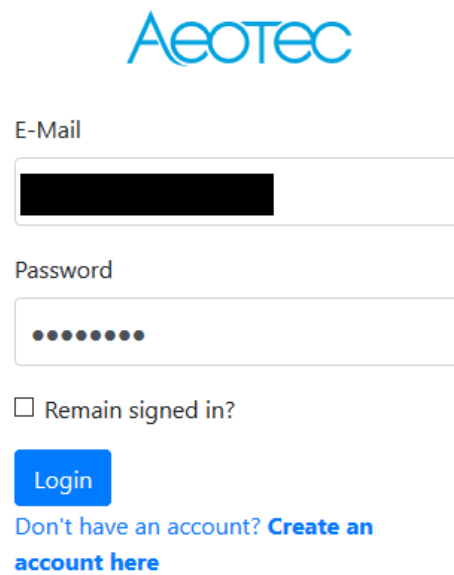


The login form features the Aeotec logo at the top. Below it, there are two input fields: 'E-Mail' and 'Password'. The 'E-Mail' field contains a redacted email address. The 'Password' field contains a series of dots representing a password. Below the password field is a checkbox labeled 'Remain signed in?'. At the bottom of the form is a blue 'Login' button. Below the button is a link that reads 'Don't have an account? Create an account here'.

Fig. 6: AEOTEC ID login

6. Click Connect to connect AutoPilot™ to your Aeotec ID account (Fig. 7)

→ You will then be redirected directly to the interface of AutoPilot™

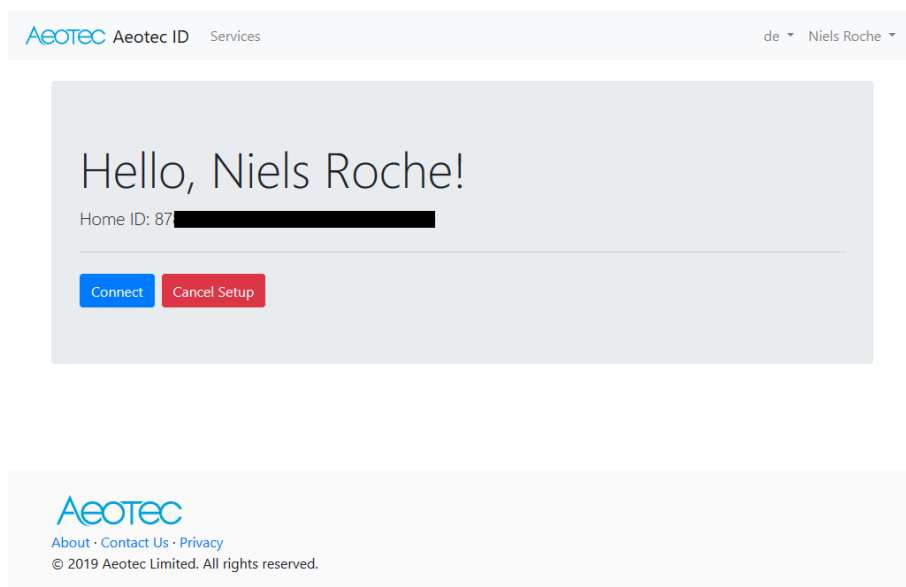

The connect dialog shows the Aeotec logo and 'Aeotec ID Services' in the top left. In the top right, there is a language dropdown set to 'de' and a user name 'Niels Roche'. The main content area has a large heading 'Hello, Niels Roche!' followed by 'Home ID: 87' and a redacted ID. Below this are two buttons: a blue 'Connect' button and a red 'Cancel Setup' button. The footer contains the Aeotec logo, links for 'About', 'Contact Us', and 'Privacy', and a copyright notice: '© 2019 Aeotec Limited. All rights reserved.'

Fig. 7: Connect Dialog

7. Follow the steps to configure the User Box (Fig. 8)

- Assign password (etc.)
- Click ✓ **Submit** to complete the process

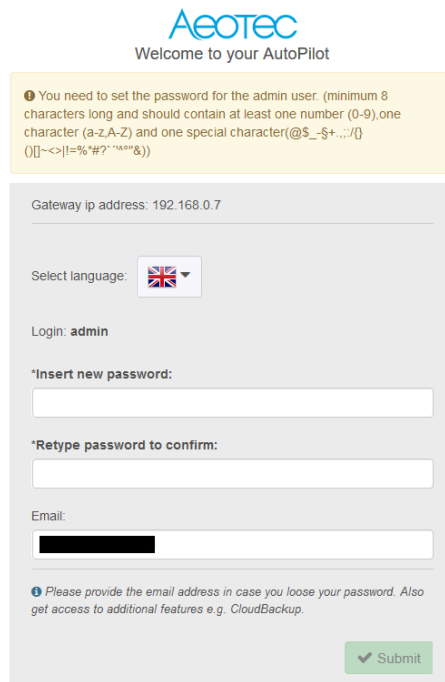


Fig. 8: AutoPilot – Initialization setup

Your AutoPilot™ has now been successfully initialized, use the short introduction (Fig. 9) to familiarize yourself with the AutoPilot™ interface.

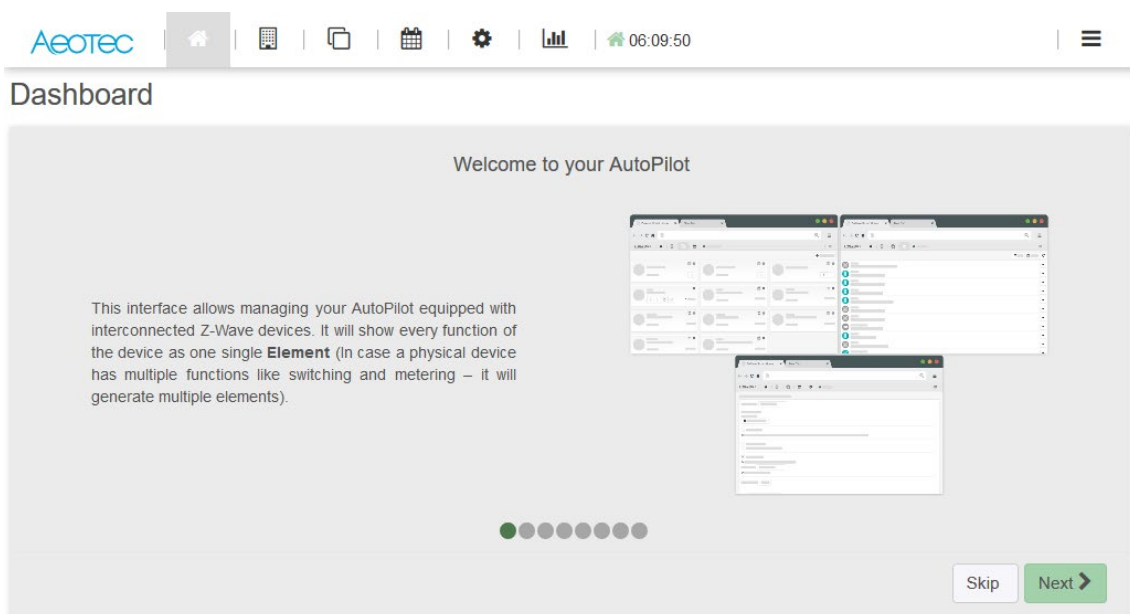


Fig. 9: AutoPilot - Introduction