



# AUTOPILOT™ QUICK START GUIDE

AutoPilot™

<b>Company :</b>	A.I.Pilot GmbH	<b>Issue :</b>	Revision R1
<b>Location :</b>	Hohenstein-Ernstthal, Germany	<b>Date :</b>	12-08-2019
<b>Project Name :</b>	-	<b>Pages :</b>	
<b>Product Name:</b>	AutoPilot™	<b>Doc No:</b>	AIP-QSG-001-ZIP_GW.docx

© 2019 A.I.Pilot GmbH. All rights reserved. Under copyright laws, this document may not be copied, in whole or in part, without the written consent of A.I.Pilot GmbH.

Other company and product names mentioned herein are trademarks of their respective companies. Mention of third-party products is for informational purposes only.

# AutoPilot™ - Quick Start Guide

1. Verbinden Sie den AutoPilot™ mit Ihrem lokalen Netzwerk
2. Schließen Sie die 5V Stromversorgung an und nehmen den AutoPilot™ in Betrieb
3. Navigieren Sie in Ihrem Browser (Chrome, Firefox, Safari) zu folgender Homepage:  
<https://setup.aeotec.com> (Abb. 1)

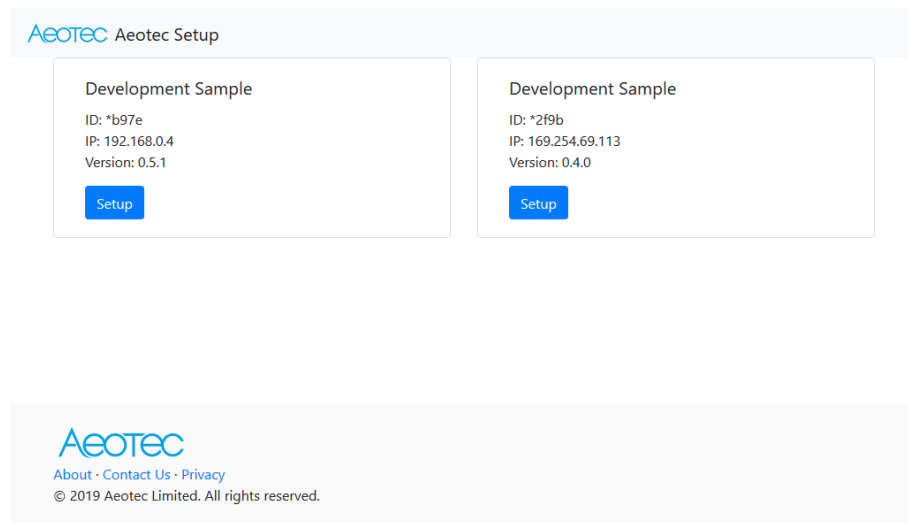


Abb 1: Homepage: <https://setup.aeotec.com>

4. Dort werden Sie eine der beiden folgenden möglichen Varianten vorfinden. Fahren Sie nach der entsprechenden Anleitung fort:
  - a. Es wurde nur ein AutoPilot™ in ihrem lokalen Netzwerk gefunden:  
→ Sie werden direkt zu <https://id.aeotec.com> weitergeleitet (Abb. 2 und 3 )
  - b. Es wurden mehrere AutoPilot™ Gateways in ihrem lokalen Netzwerk gefunden:  
→ Wählen Sie aus der Liste der verfügbaren AutoPilot™ Gateways den aus, welchen Sie einrichten möchten  
→ Klicken Sie auf **Setup** (Abb. 1)

*Falls Ihr AutoPilot™ noch nicht zu sehen ist, laden Sie die Seite erneut. Überprüfen Sie gegebenenfalls die Ethernet Verbindung und starten Sie das Gerät neu indem Sie es kurzzeitig von der Stromverbindung trennen.*

Zur Anmeldung über die AEOTEC ID kann alternativ zu <https://id.aeotec.com> auch die Adresse <https://home.aeotec.com> genutzt werden.

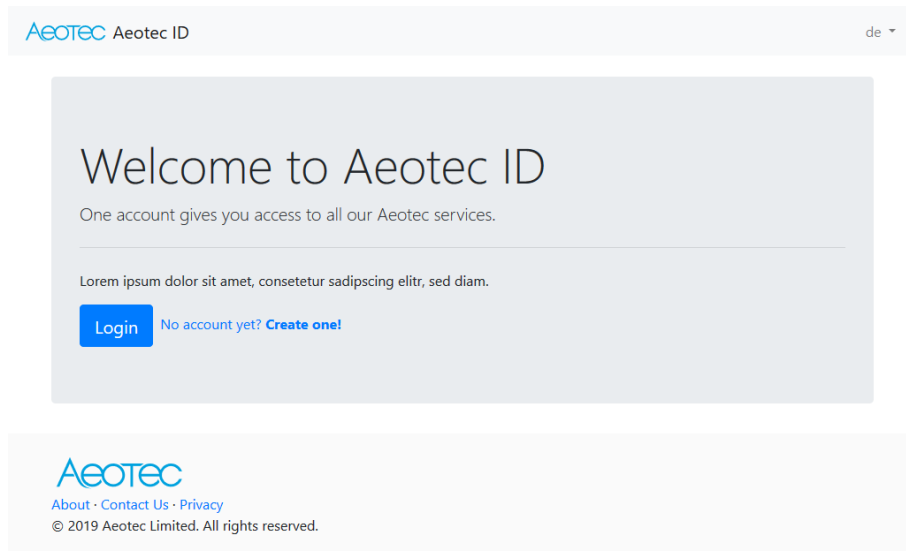


Abb. 2: Homepage: <https://id.aeotec.com>

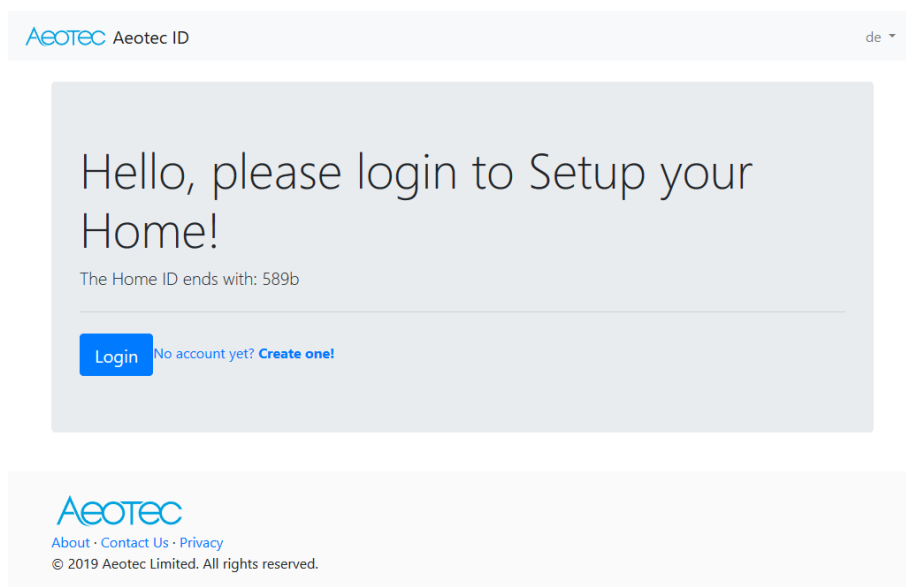



Abb. 3: Weiterleitung AutoPilot setup

5. Melden Sie sich bei AEOTEC ID (Abb. 2) an, um den AutoPilot™ mit ihrem Account zu verbinden
  - a. Sie haben bereits einen Aeotec ID Account?
    - anmelden (Abb. 6)
    - Weiterleitung zum **Setup/Connect Dialog** (Abb. 7)
  - b. Sie haben noch keinen Account!
    - Klicken Sie auf **No account yet? Create one!** (Abb. 2 und 3)
    - Nach dem erfolgreichen Anlegen eines neuen Aeotec ID Account (Abb. 4) erfolgt eine E-Mail-Verifizierung (Abb. 5)
    - Weiterleitung zum **Setup/Connect Dialog** (Abb. 7)


de ▾

First name

Last name

E-Mail

Password

Password confirm

Register


  
[About](#) · [Contact Us](#) · [Privacy](#)  
© 2019 Aeotec Limited. All rights reserved.

Abb.4: AEOTEC ID – Account anlegen

Aeotec ID

**Hello!**

In order to use the application, please verify your email address.

Activate your account

Thank you for using our application!


Regards,  
Aeotec ID

---

If you're having trouble clicking the "Activate your account" button, copy and paste the URL below into your web browser:  
<https://id.aeotec.com/api/v1/auth/verify/6cd578cabd7d1b6cf131e9220e8c4c11513c13e22?expires=1564483669&signature=87206c62a692aed190c4c89f68c39bf5649d3ec7edd5950c3a6edd1bbca4edf5>

© 2019 Aeotec ID. All rights reserved.

Abb 5: E-Mail Validierung

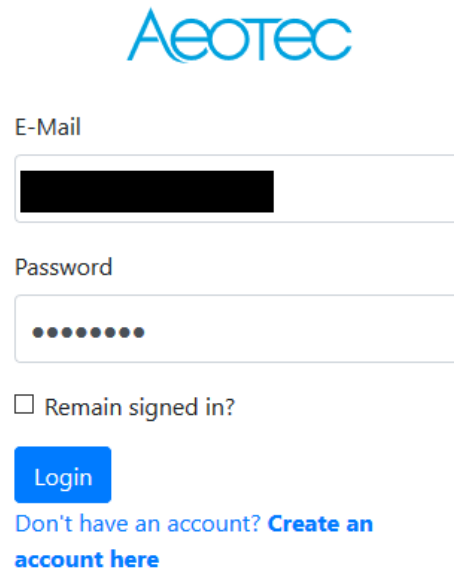


The image shows the Aeotec ID login interface. At the top is the Aeotec logo. Below it, there are two input fields: 'E-Mail' and 'Password'. The 'E-Mail' field contains a redacted email address. The 'Password' field contains a series of dots. Below the password field is a checkbox labeled 'Remain signed in?'. Underneath the checkbox is a blue 'Login' button. At the bottom, there is a link that says 'Don't have an account? Create an account here'.

Abb. 6: AEOTEC ID login

6. Klicken Sie **Connect** um den AutoPilot™ mit Ihrem Aeotec ID Account zu verbinden (Abb. 7)

→ Sie werden anschließend direkt auf die Oberfläche des AutoPilot™ weitergeleitet

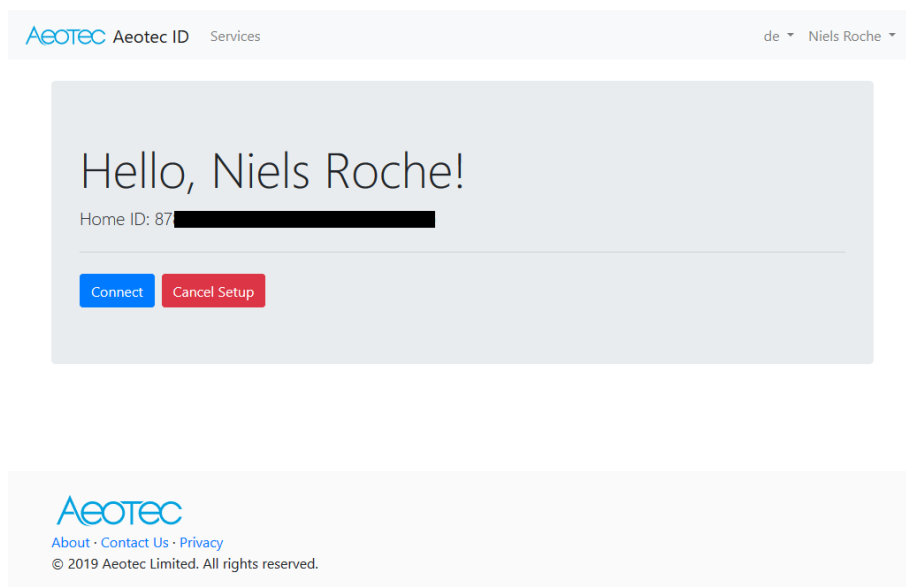

The image shows the Aeotec Connect Dialog. At the top, there is a header bar with the Aeotec logo, 'Aeotec ID', 'Services', and a language dropdown set to 'de'. To the right of the header is the user's name 'Niels Roche'. The main content area has a light blue background and displays 'Hello, Niels Roche!' followed by 'Home ID: 87' and a redacted ID number. Below this, there are two buttons: a blue 'Connect' button and a red 'Cancel Setup' button. At the bottom of the dialog, there is a footer bar with the Aeotec logo, links for 'About', 'Contact Us', and 'Privacy', and the copyright notice '© 2019 Aeotec Limited. All rights reserved.'.

Abb. 7: Connect Dialog

## 7. Folgen Sie den Schritten zum Konfigurieren der Box (Abb. 8)

→ Passwort vergeben (etc.)

→ Klicken Sie auf **✓ Submit**, um den Vorgang abzuschließen

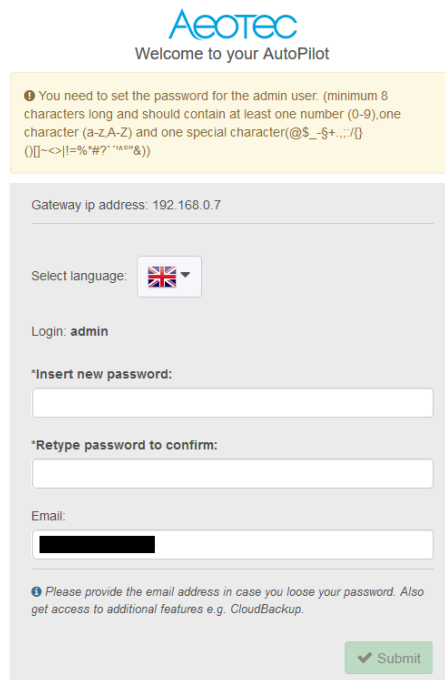


Abb. 8: AutoPilot Initialisierungs Setup

Ihr AutoPilot™ wurde nun erfolgreich initialisiert, nutzen Sie die kurze Einführung (Abb. 9), um sich mit der Oberfläche des AutoPilot™ vertraut zu machen.

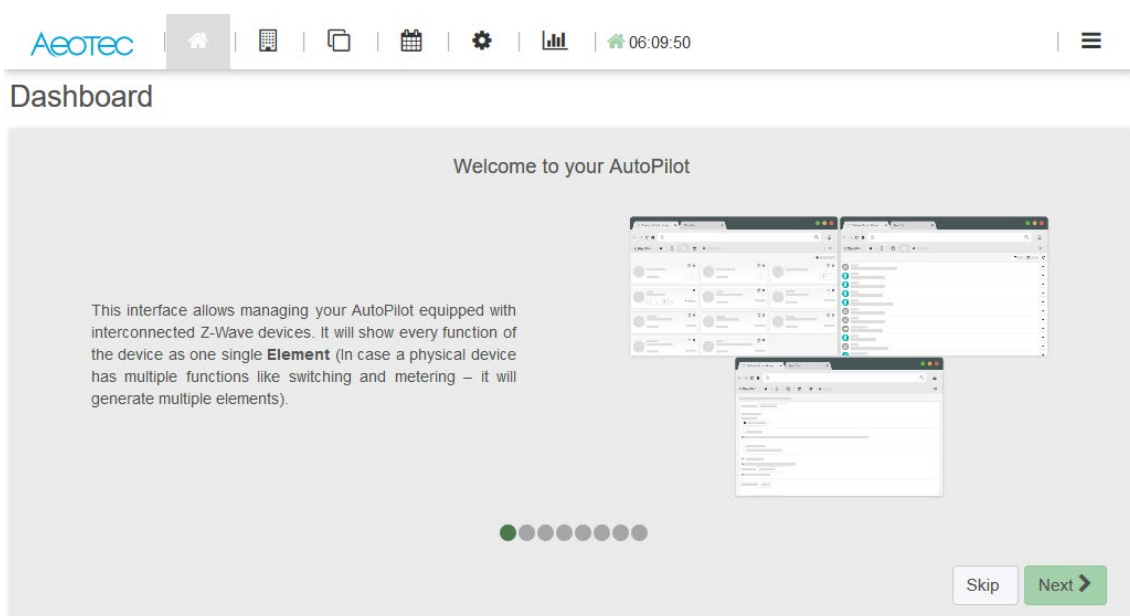


Abb. 9: AutoPilot - Einführungs Slideshow